


## Kerakli asbob va vositalar:

- 32GB yoki undan yuqori USB-Flesh Xotira(fleshka).
- Ikkinchi kompyuter(yana bir kompyuter).
- Internet. (mobil yoki kabel yoki Wi-Fi farqi yo'q).




# Windows 11 o'rnatish tasviri (ISO) faylni yuklab olish

Do'stingizni kompyuterida rufus.ie saytiga  
kiring

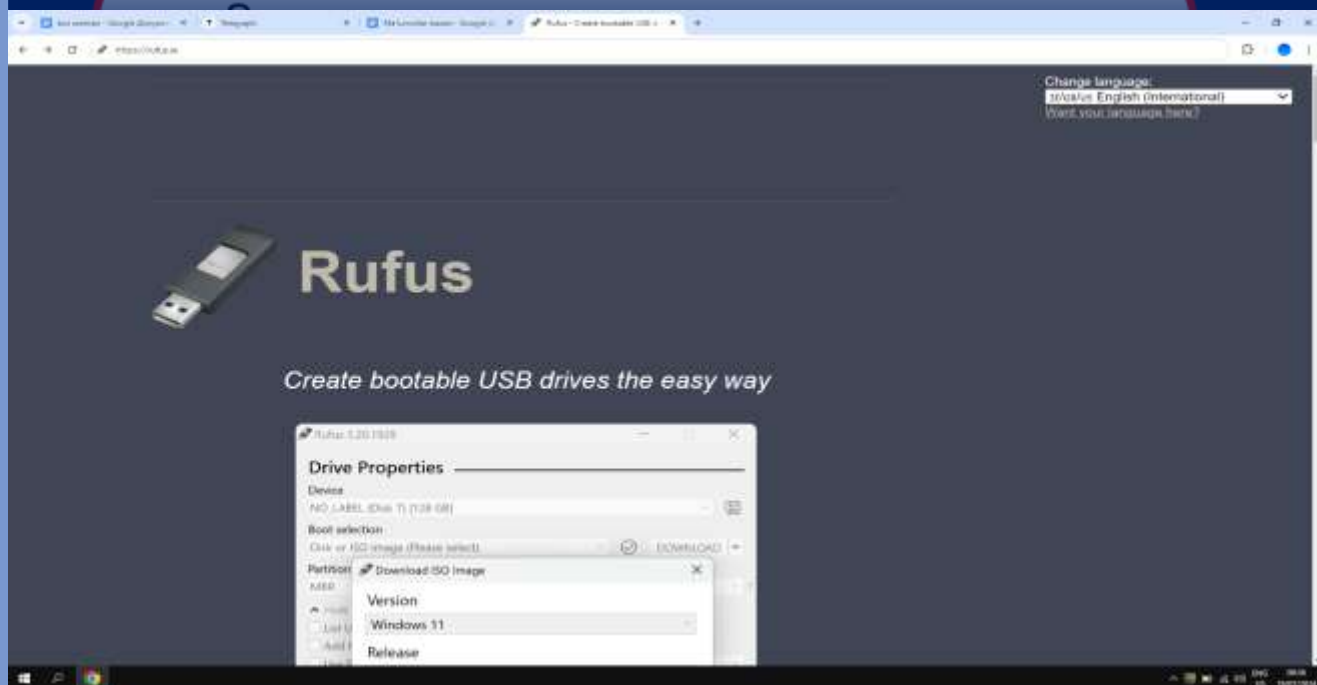

**Pastroqdan rufus-4.5p.exe Portable ni toping  
va unga bosing.**

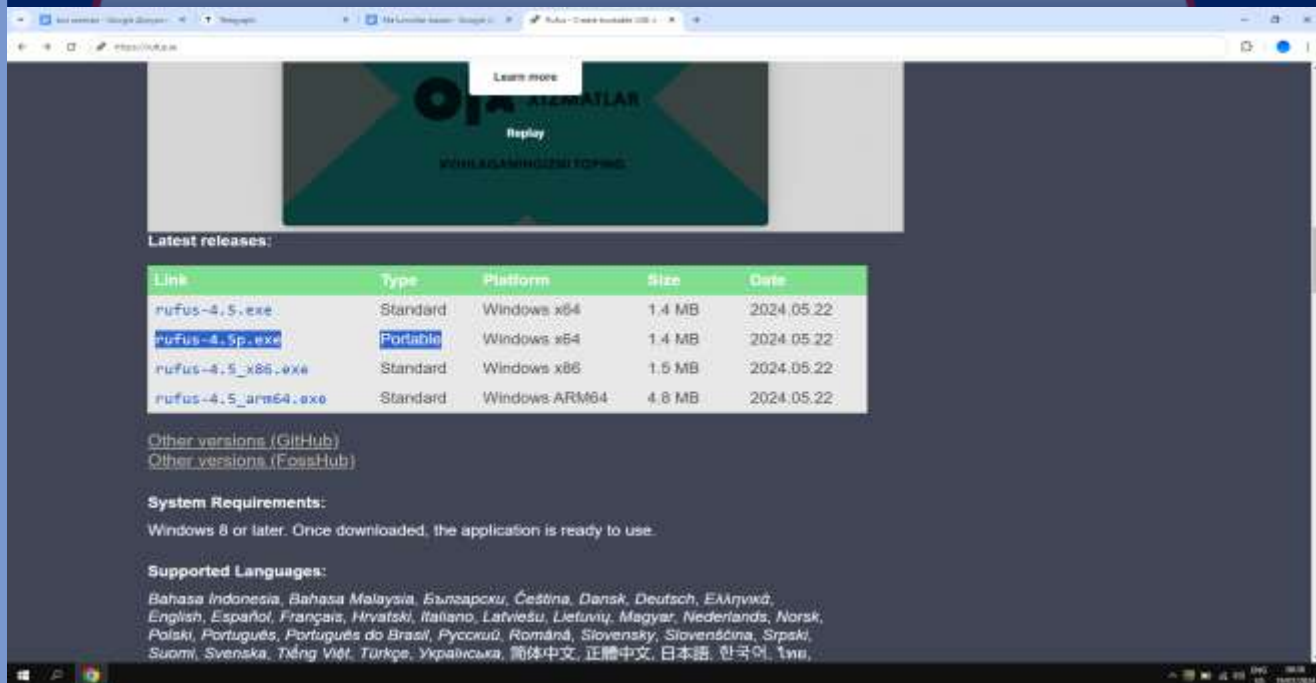

The screenshot shows the Rufus website with a dark theme. At the top, there's a navigation bar with links for 'Download', 'Features', 'FAQ', 'Support', and 'About'. Below the navigation bar, there's a large banner with the text 'Rufus - Disk Imager' and 'Portable'. A 'Learn more' button is visible. Below the banner, there's a section titled 'Latest releases:' followed by a table of releases. The table has columns for 'Link', 'Type', 'Platform', 'Size', and 'Date'. The 'Link' column contains links to download the software, with 'rufus-4.5p.exe' highlighted. The 'Type' column shows 'Portable' for the highlighted version. The 'Platform' column shows 'Windows x64'. The 'Size' column shows '1.4 MB'. The 'Date' column shows '2024.05.22'. Below the table, there are links for 'Other versions (GitHub)' and 'Other versions (Fosshub)'. A 'System Requirements' section follows, stating 'Windows 8 or later. Once downloaded, the application is ready to use.' Finally, a 'Supported Languages:' section lists various languages including Bahasa Indonesia, Bahasa Malaysia, Беларуская, Čeština, Dansk, Deutsch, Ελληνικά, English, Español, Français, Hrvatski, Italiano, Latviešu, Lietuvių, Magyar, Nederlands, Norsk, Polski, Português, Português do Brasil, Русский, Română, Slovensky, Slovenščina, Srpski, Suomi, Svenska, Tiếng Việt, Türkçe, Українська, 简体中文, 正體中文, 日本語, 한국어, and ไทย.


Link	Type	Platform	Size	Date
<a href="#">rufus-4.5.exe</a>	Standard	Windows x64	1.4 MB	2024.05.22
<a href="#">rufus-4.5p.exe</a>	Portable	Windows x64	1.4 MB	2024.05.22
<a href="#">rufus-4.5_x86.exe</a>	Standard	Windows x86	1.5 MB	2024.05.22
<a href="#">rufus-4.5_arm64.exe</a>	Standard	Windows ARM64	4.8 MB	2024.05.22

[Other versions \(GitHub\)](#)  
[Other versions \(Fosshub\)](#)


**System Requirements:**  
Windows 8 or later. Once downloaded, the application is ready to use.

**Supported Languages:**  
Bahasa Indonesia, Bahasa Malaysia, Беларуская, Čeština, Dansk, Deutsch, Ελληνικά, English, Español, Français, Hrvatski, Italiano, Latviešu, Lietuvių, Magyar, Nederlands, Norsk, Polski, Português, Português do Brasil, Русский, Română, Slovensky, Slovenščina, Srpski, Suomi, Svenska, Tiếng Việt, Türkçe, Українська, 简体中文, 正體中文, 日本語, 한국어, ไทย.


# Google'ga Windows 11 download deb qidiruv bering

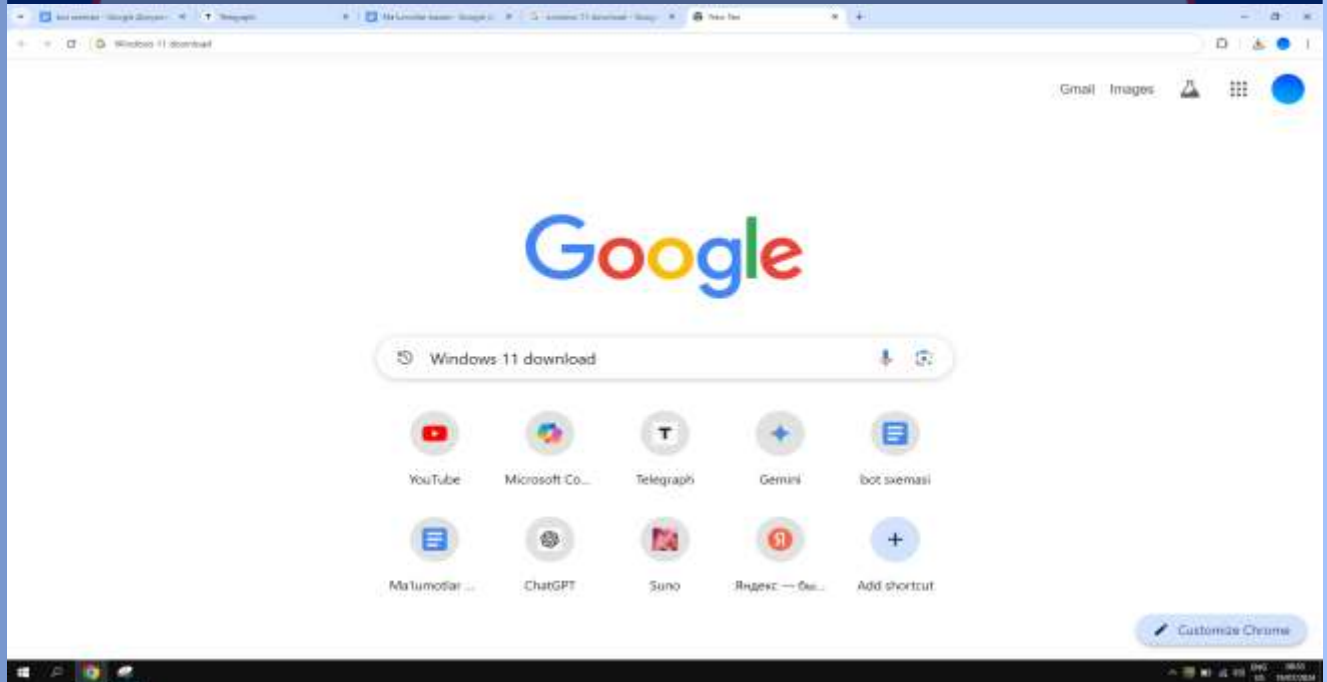

# Download Windows 11 - Microsoft natijasiga bosing

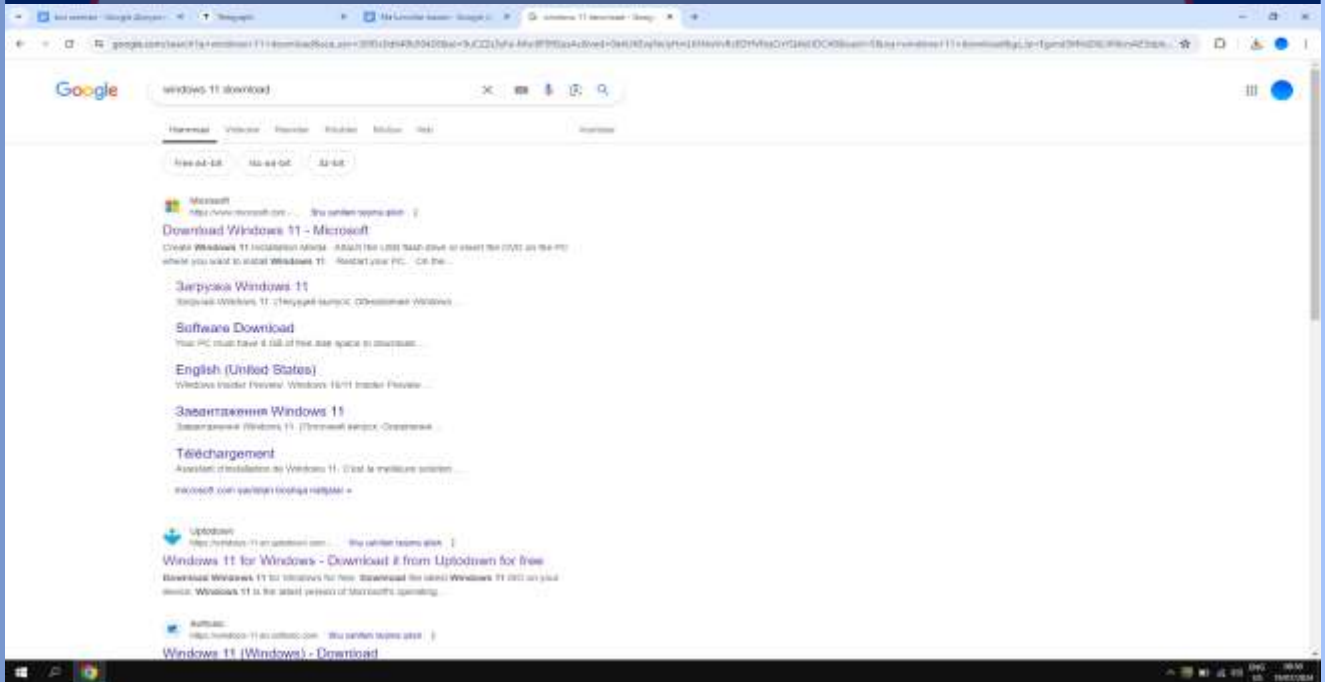

# Windows 11 rasmiy sayti ochiladi

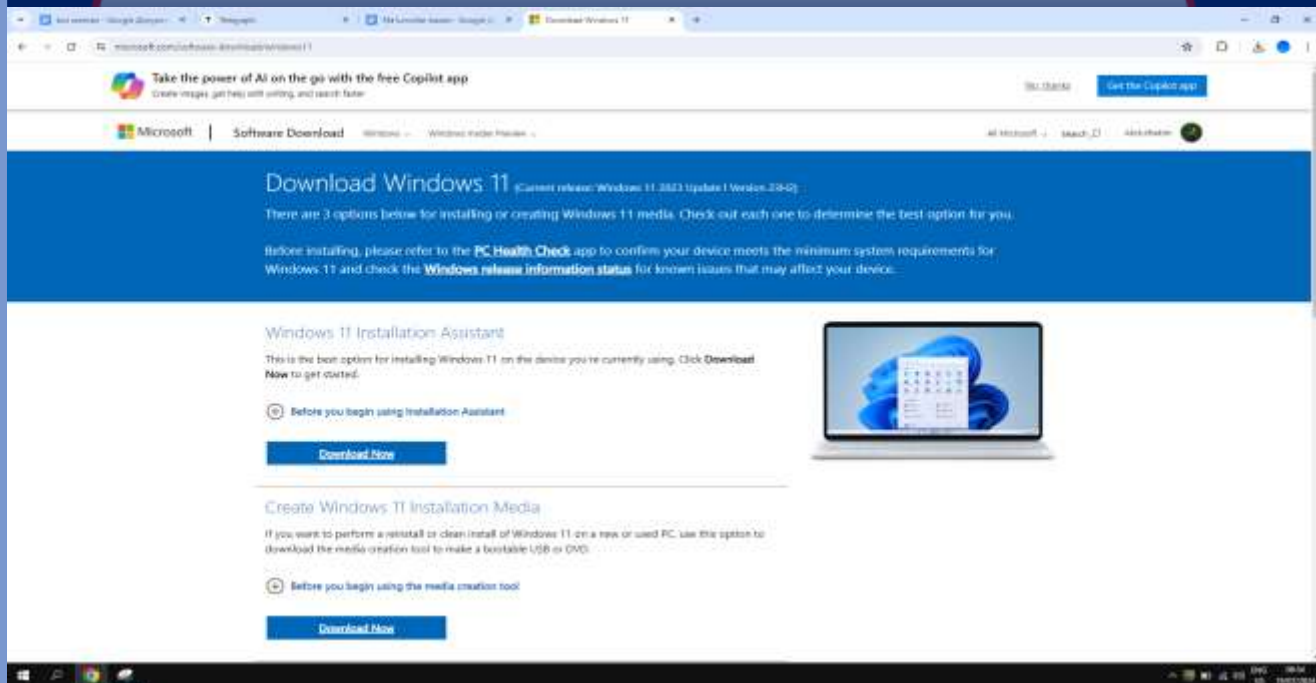

## Pastroqda "Download Windows 11 Disk Image (ISO) for x64 devices" bo'limini toping

microsoft.com/software-download/windows11

### Download Windows 11 Disk Image (ISO) for x64 devices

This option is for users that want to create a bootable installation media (USB flash drive, DVD) or create a virtual machine (.ISO file) to install Windows 11. This download is a multi-edition ISO which uses your product key to unlock the correct edition.

Select Download



Before you begin downloading an ISO

[Download Now](#)

Windows 11 (multi-edition ISO for x64 devices)  
**ni tanlang va download now**  
**tugmasini bosing**

microsoft.com/software-download/windows11

## Download Windows 11 Disk Image (ISO) for x64 devices

This option is for users that want to create a bootable installation media (USB flash drive, DVD) or create a virtual machine (.ISO file) to install Windows 11. This download is a multi-edition ISO which uses your product key to unlock the correct edition.


Windows 11 (multi-edition ISO for x64 devices) ▼

⊕ Before you begin downloading an ISO

[Download Now](#)



**Select product language - bo'limidan rus yoki ingliz tilini tanlang**

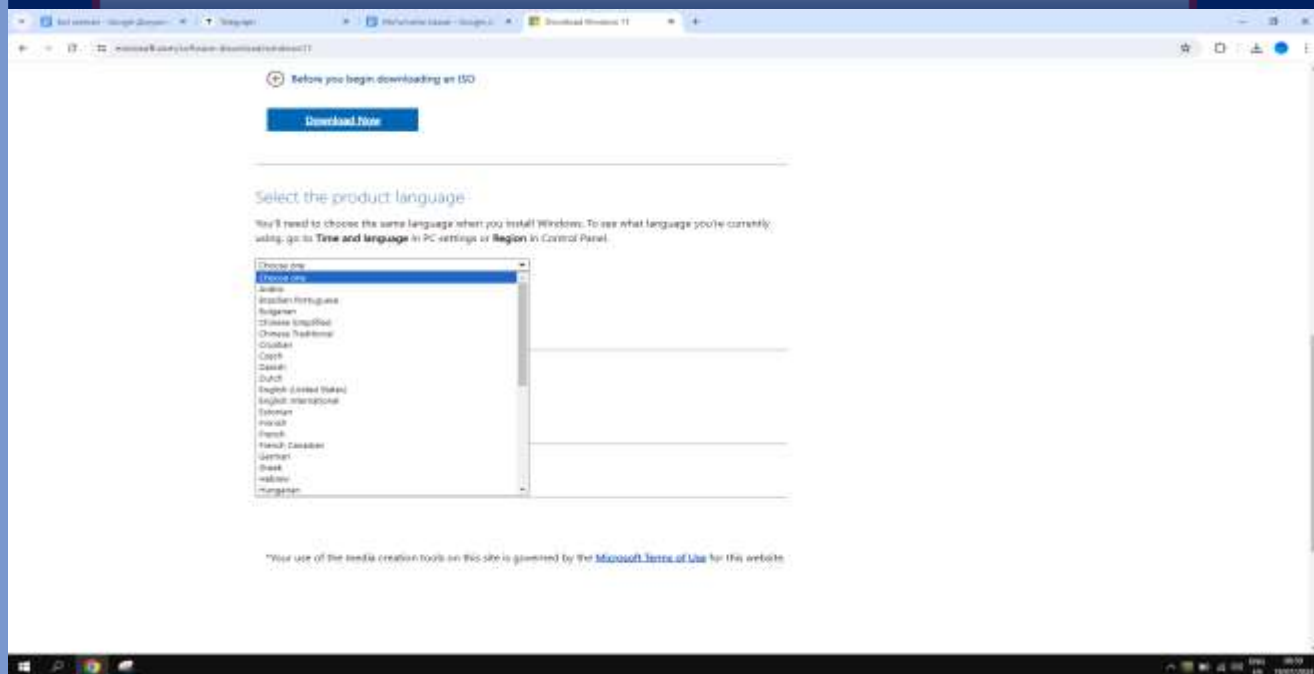

## Confirm tugmasini bosing

### Select the product language

You'll need to choose the same language when you install Windows. To see what language you're currently using, go to **Time and language** in PC settings or **Region** in Control Panel.

Russian ▼

[Confirm](#)

---

**Download 64 bit tugmasiga bosing**


Download - Windows 11 Russian

**64-bit Download**




Verify your download

## File Explorer(fayl)ga kiring va Yuklamalar pakasiga kiring(загрузки)

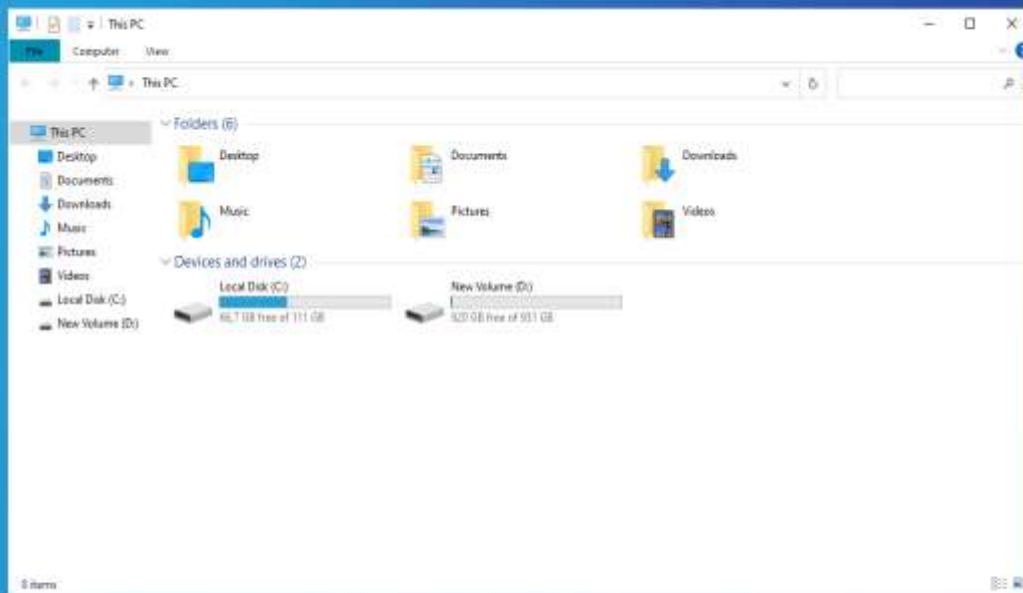


# Yuklab olingan rufus ilovasini toping va unga kiring

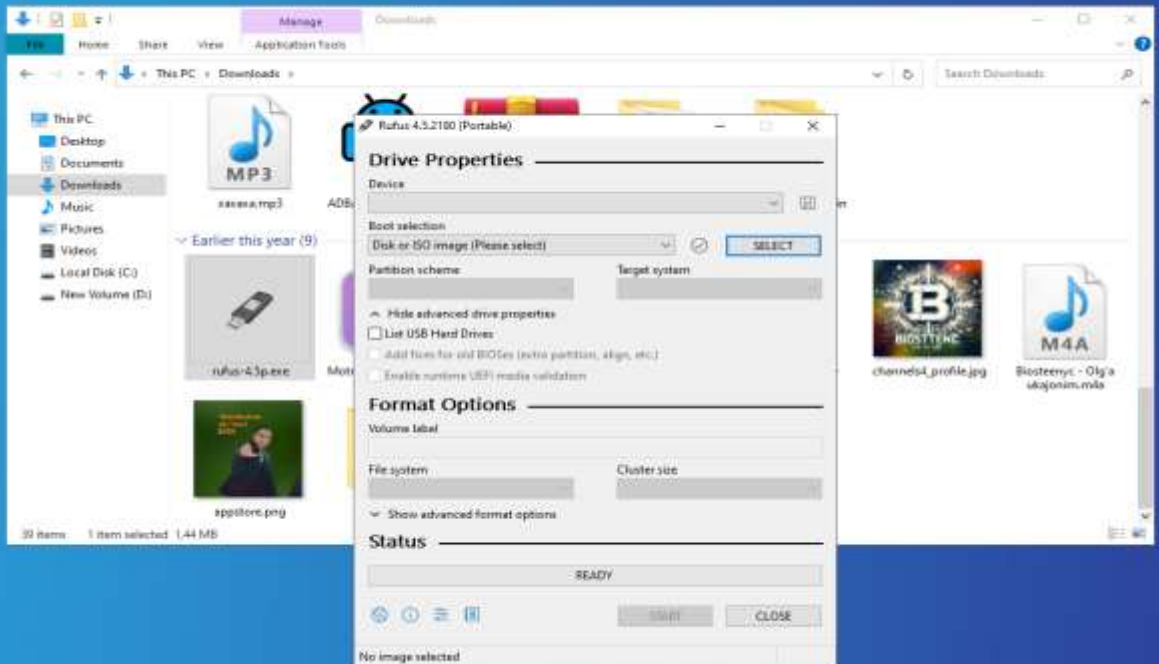

**Fleshkani kompyuterga ulang. Ulaganingizda Rufusni Device(Устройство) bo'limida fleshka nomi ko'rinadi.**

**Boot selection(Выбор загрузки) bo'limidan SELECT(ВЫБИРАТЬ) tugmasini bosing.**

**Fayldan yuklab olingan Windows o'rnatish ISO tasvirni tanlang(Windows 11\_23H2\_64bit.iso).**

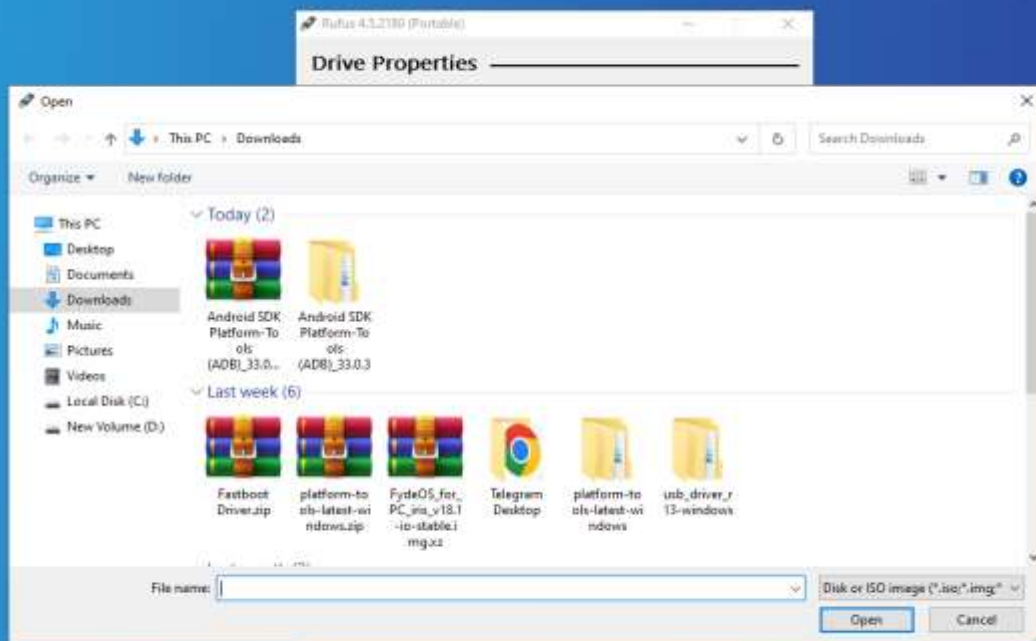

**Rufusdan Start(начать) tugmasini  
bosing. 100% bo'lgunga qadar kuting.**

**Status** \_\_\_\_\_

READY



START

CLOSE

**Jarayon yakunlangach fleshkani uring  
va o'zingizni kompyuteringizga ulang.**

Jarayon yakunlangach fleshkani uring va o'zingizni kompyuteringizga ulab "Boot option" menyusiga kiring. Kompyuterni Power(o'chirish/yoqish) tugmasi bir bosib va shu zahoti F12 tugmasini miltillatib bosib turing. Agar boot option'sga kira olmagan bo'lsangiz F12 o'rniga Esc, F9, F2, F10, F1, Del, F8, F11, F5 tugmalarini sinab ko'ring





## BOOT OPTIONS'dan USB Fleshkangizni tanlang

BOOT OPTIONS

Windows boot manager.

Sandisk 32GB USB-Drive


**Tilni tanlang va NEXT tugmasini bosing**




**Install now   tugmasini bosing**



**Bu joyda windows ni turli versiyalarini tanlash  
mumkin. PRO versiyasini tavsiya etaman.  
Tanglang va Next tugmasini bosing**

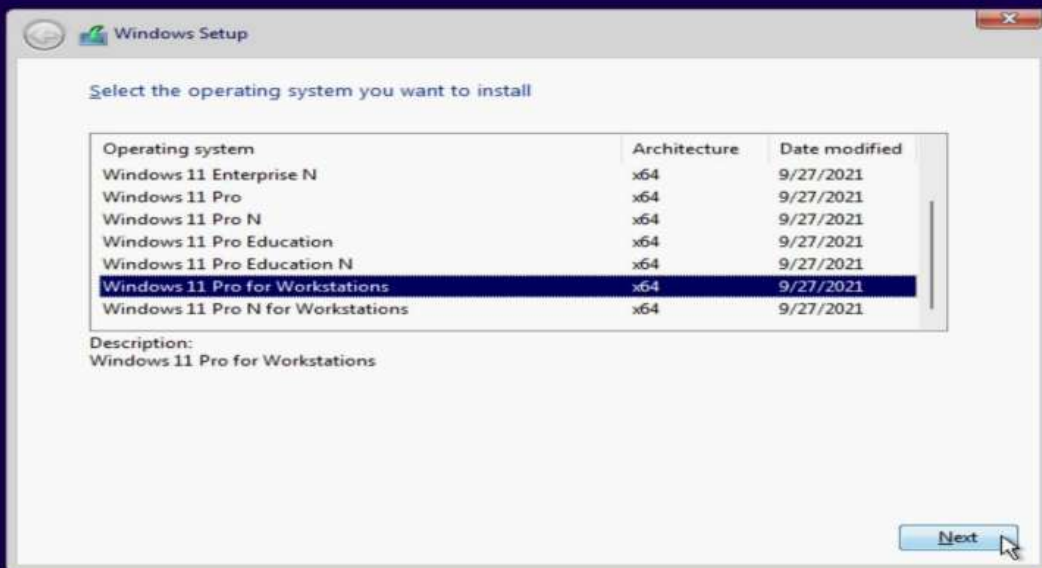

**Mark(птичка)  qo'yib letsenziyani oling va  
NEXT tugmasini bosing**

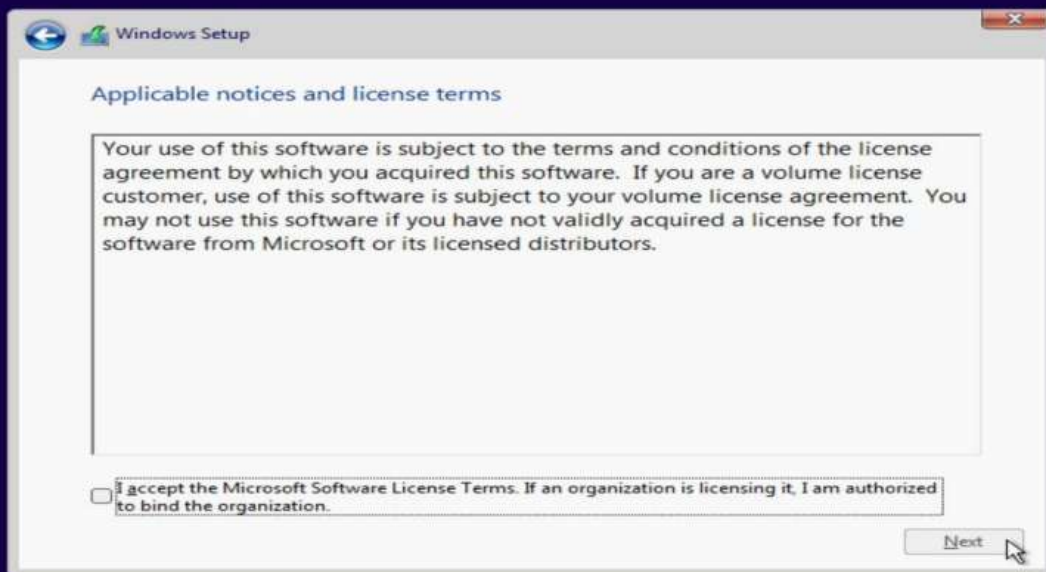

**1**

Collecting information

**2**


Installing Windows

## Custom rejimini tanlang



**Fayllaringiz saqlangan disk(D disk)dan tashqari barcha disklarni delete tugmasini bosib o'chirib tashlang. O'chirilgan disklar bitta Unallocated Space diskda jamlanadi. Shu diskni tanlab NEXT tugmasini bosing.**

GB o'lchami ko'proq bo'lgan disk D Fayllar diskni bo'ladi.

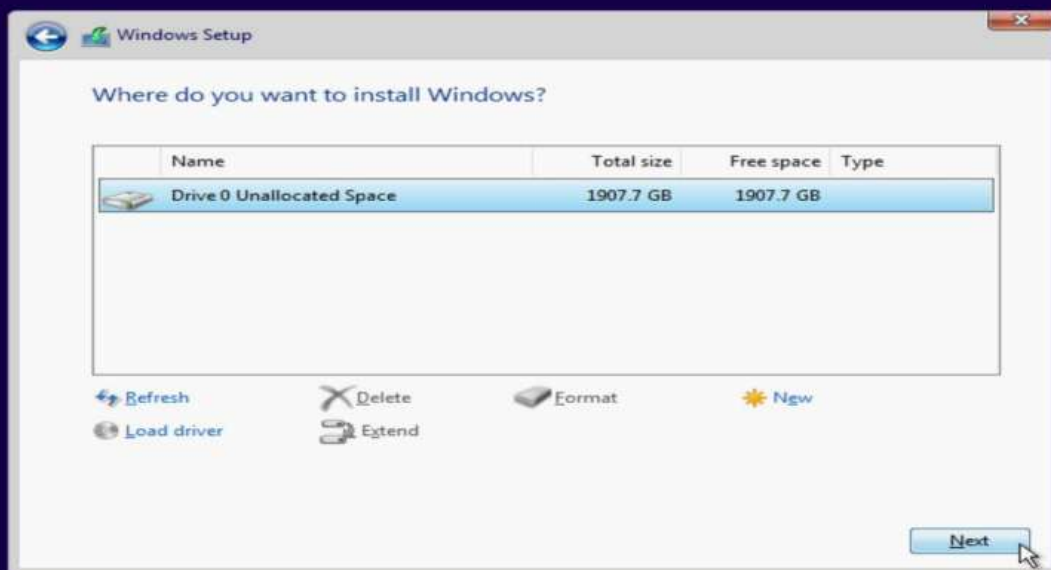


1

Collecting information

2

Installing Windows

O'rnatilish yakunlanishini kuting

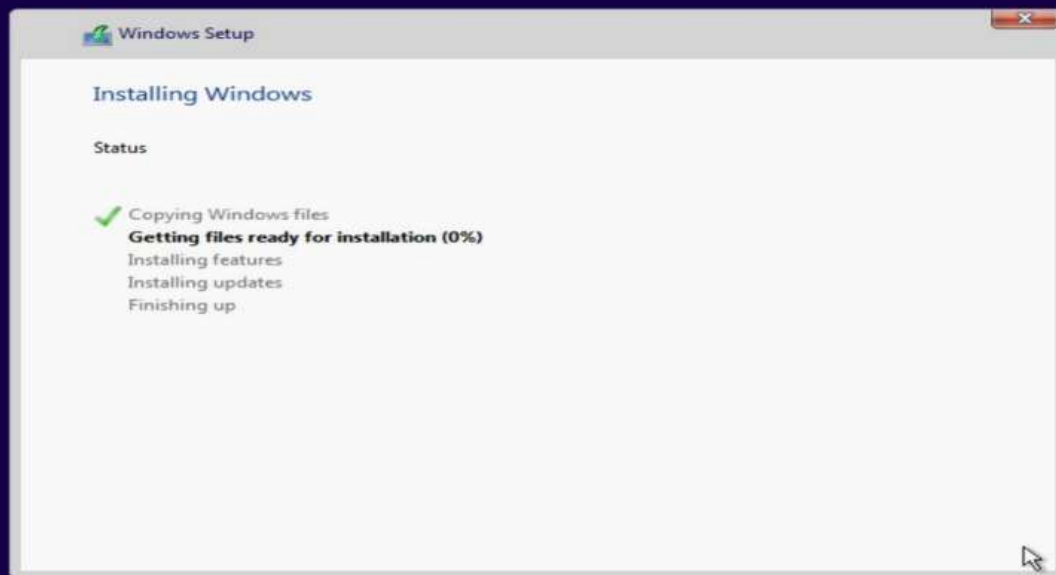

1


Collecting information

2

Installing Windows



**Restart now (перезагрузить сейчас) tugmasini  
bosing yoki o'zi o'chib yonishini kuting**

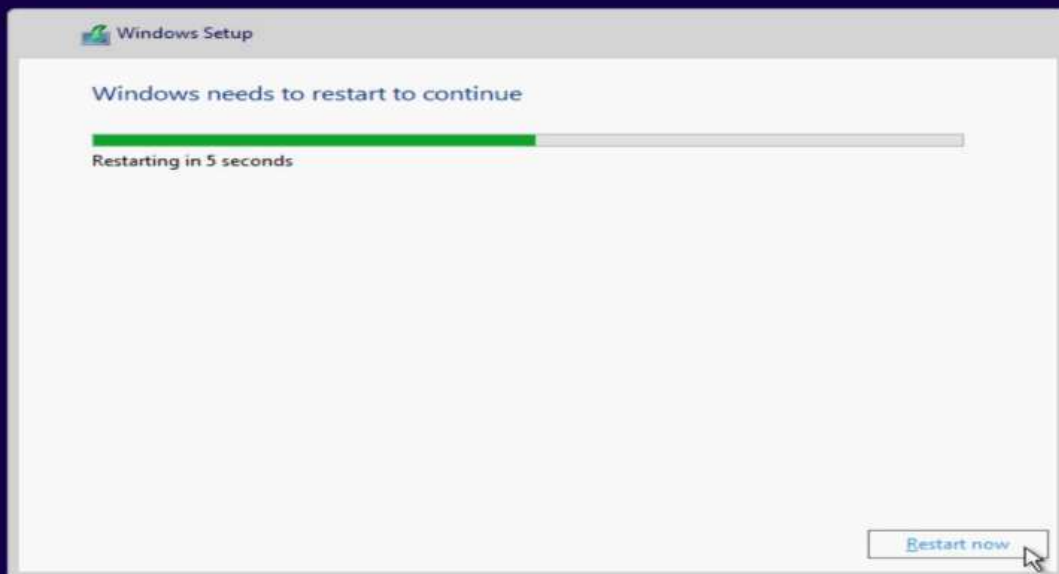

1


Collecting information

2

Installing Windows

## Windows Ishga tushirish. Mamlakatingizni tanlang

Is this the right country or region?



Ukraine

United Arab Emirates

United Kingdom

**United States**

Uruguay

Uzbekistan

Yes

## Yes(Да) tugmasini bosing

Is this the right keyboard layout or input method?

If you also use another keyboard layout, you can add that next.

US

Canadian Multilingual Standard

English (India)

Irish


NZ Aotearoa




Yes




**Skip(Пропустить) tugmasini bosing**

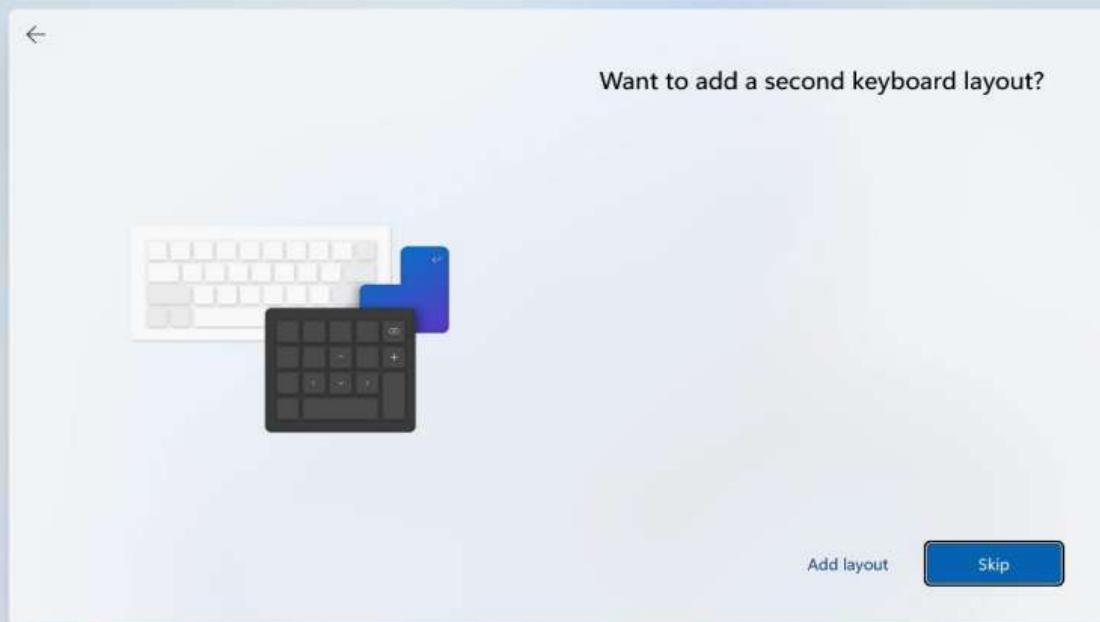

**I don't have internet(У меня нет интернета)  
tugmasini bosing**

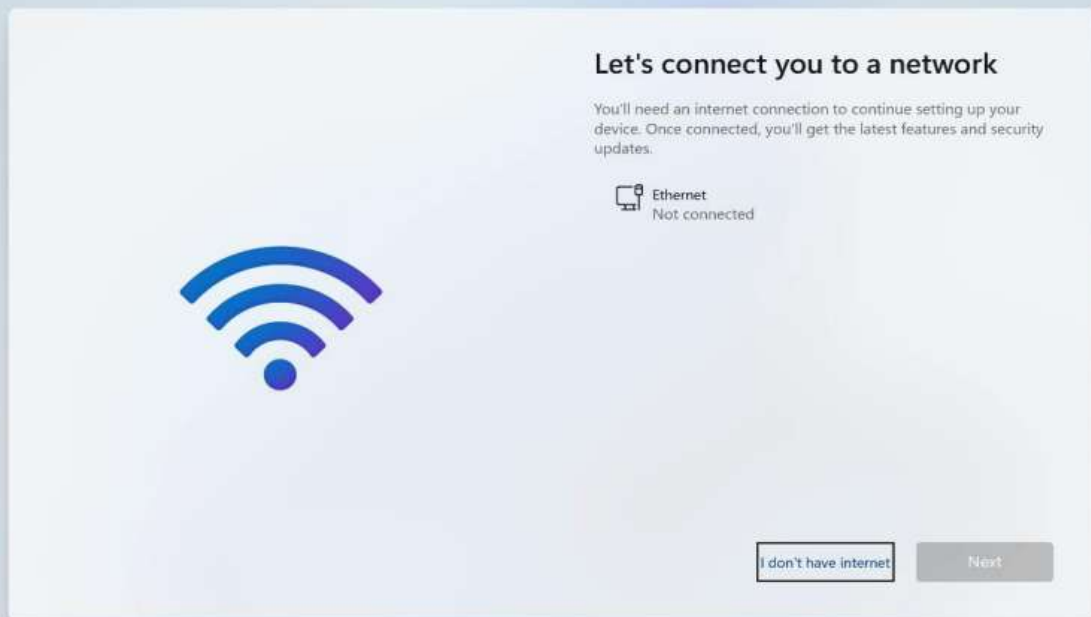

**continue with limited setup(продолжить с  
ограниченной настройкой) tugmasini bosing**

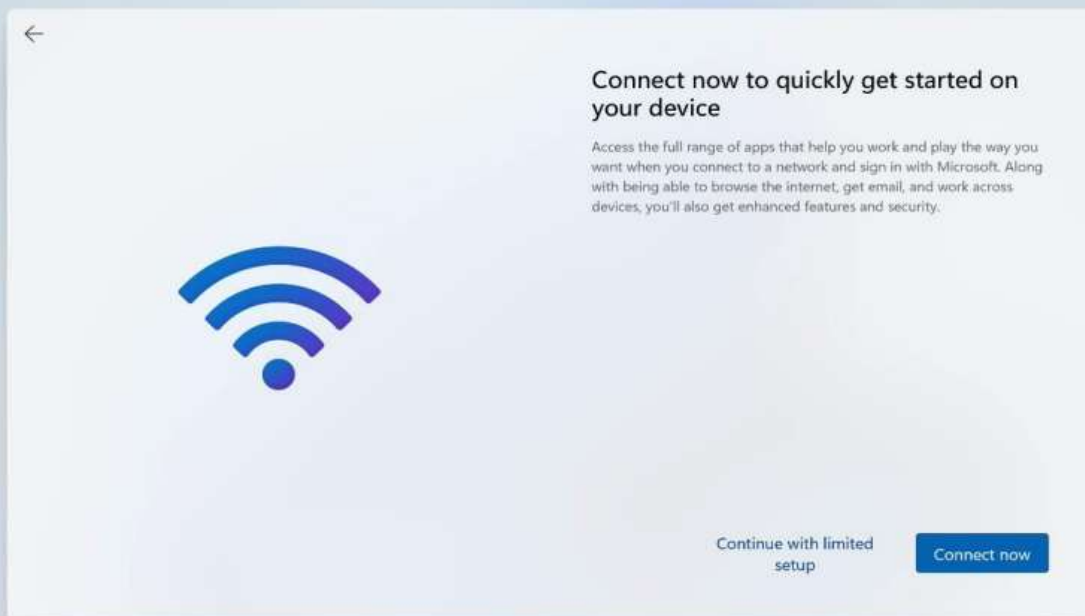

**Ismingizni yoki Tahallusingizni kiriting**

**Who's going to use this device?**

You'll use this name to sign in to your device.


Enter your name

Name

Next



**Parol kiritib yoki kiritmasdan NEXT tugmasini bosing**

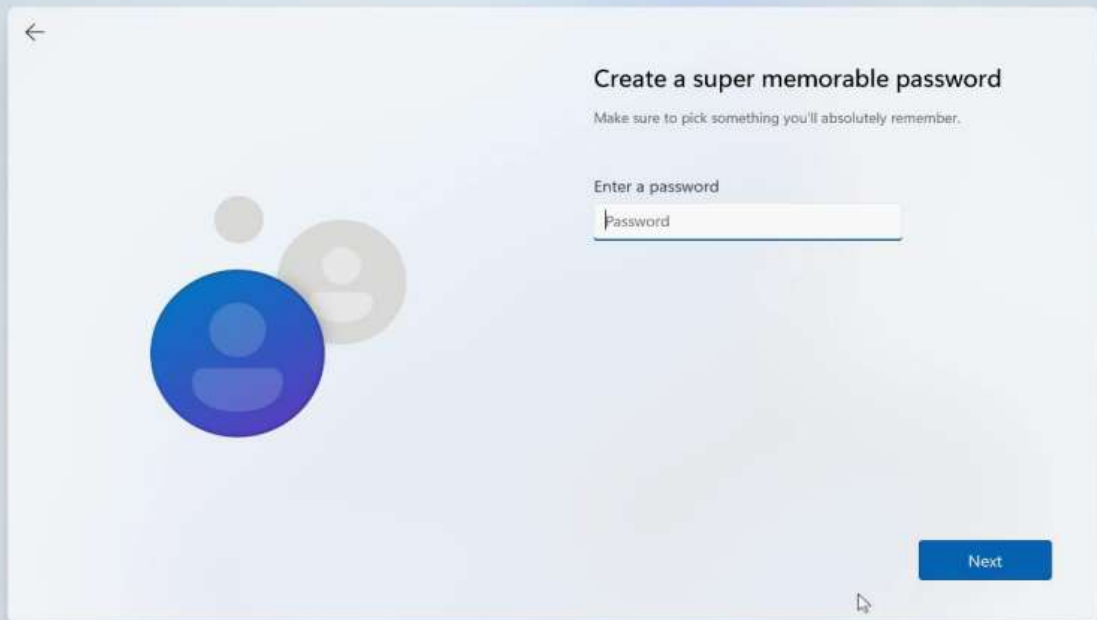

A screenshot of a mobile application's password creation screen. The screen has a light blue background. On the left, there is a large blue circular profile icon with a white silhouette of a person. To the right of the icon, the text "Create a super memorable password" is displayed in a bold, dark font. Below this, a smaller line of text reads "Make sure to pick something you'll absolutely remember." Further down, the text "Enter a password" is shown above a white rectangular input field with a thin blue border. The input field contains the placeholder text "Password". At the bottom right of the screen, there is a blue rectangular button with the word "Next" in white. A small mouse cursor icon is visible near the bottom right corner of the screen.

←

**Create a super memorable password**

Make sure to pick something you'll absolutely remember.

Enter a password


Password

Next





**Maxfiylik sozlamalarini tabingizga ko'ra sozlab NEXT tugmasini bosing.**



### Choose privacy settings for your device

Microsoft puts you in control of your privacy. Choose your settings, then select **Accept** to save them. You can change these settings at any time.

**Location**  
Get location-based experiences like directions and weather. Let Windows and apps request your location and allow Microsoft to use your location data to improve location services.

☒ Yes

**Find my device**  
Turn on Find my device and use your device's location data to help you find your device if you lose it. You must sign in to Windows with your Microsoft account to use this feature.

☒ Yes

**Diagnostic data**  
Send info about the websites you browse and how you use apps and features, plus additional info about device health, device activity, and enhanced error reporting. Required diagnostic data will

[Learn more](#) [Next](#)

## Choose privacy settings for your device

Microsoft puts you in control of your privacy. Choose your settings, then select **Accept** to save them. You can change these settings at any time.



always be included when you choose to send Optional diagnostic data.

☒ Include Optional

### Inking & typing

Send optional inking and typing diagnostic data to Microsoft to improve the language recognition and suggestion capabilities of Microsoft apps and services.

☒ Yes

### Tailored experiences

Let Microsoft use your diagnostic data, excluding information about websites you browse, to offer you personalized tips, ads, and recommendations to enhance your Microsoft experiences.

☒ Yes

[Learn more](#)

**Next**



## Choose privacy settings for your device

Microsoft puts you in control of your privacy. Choose your settings, then select **Accept** to save them. You can change these settings at any time.



### Tailored experiences

Let Microsoft use your diagnostic data, excluding information about websites you browse, to offer you personalized tips, ads, and recommendations to enhance your Microsoft experiences.

☒ Yes

### Advertising ID

Apps can use advertising ID to provide more personalized advertising in accordance with the privacy policy of the app provider.

☒ Yes

Select **Learn more** for info on the above settings, how Microsoft Defender SmartScreen works, and the related data transfers and uses.

[Learn more](#)

**Accept**



**Yangi Windows'ingiz qutluq bo'lsin!**

